

Production ADVERS LLC

Sales

Autoterm LLC

Trikatas street 4, Riga, Latvia, LV-1026

+371 20110229

E-mail: sales@autoterm-europe.com

Service

Autoterm LLC

Trikatas street 4, Riga, Latvia, LV-1026

+371 25529999

E-mail: service@autoterm-europe.com



GSM-SIMCOM

Modem

Operation Manual

ADVR.199.00.00.000 RE



Scan the QR code to download the Autoterm Control application.

1. Purpose

The GSM-SIMCOM modem is designed for use in BINAR-5-Compact, BINAR-5S, 14TC-10, and 14TC-mini liquid pre-heaters and in PLANAR air heaters (referred to for ease as “product” or “products” throughout).

The modem is used for manual and automatic control of the product and for sending data to a phone using SMS messages.

2. Specifications

No.	Name	Characteristics
1	Voltage (V): upper limit - lower limit -	32 10
2	Operating temperature range	from -40°C to +85°C
3	Dimensions (excluding antenna and cable)	(75 x 75 x 22) MM

3. Packing

- modem (1);
- modem connection harness (2);
- antenna (3);
- operation manual.

4. Modem Description

Figure 1 shows an external view of the modem. The following are located on the modem:

- 6-pin cable connector (1);
- antenna connector (2);
- SIM-card holder (3);
- LED's (4).

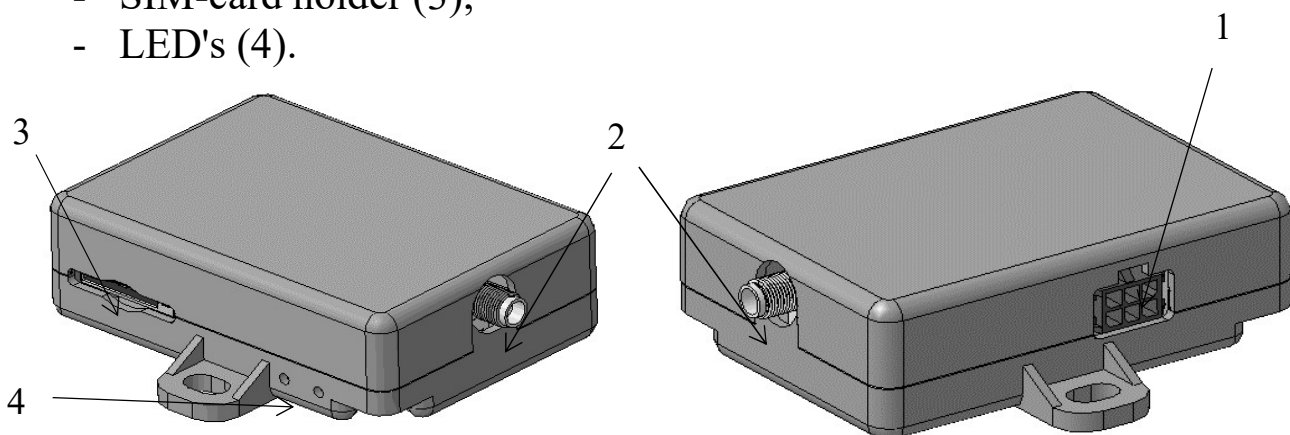


Fig. 1. Modem

4.1 Modem Connection

To set the modem up, insert the SIM card, connect the antenna, connect the harness to the modem and place the modem in a clean location. Mount the antenna in an unobstructed location (for example, on the windshield).

Insert the SIM card in the slot with its contacts facing down, push carefully until a click. Then it is secured in its position. To remove the SIM card from the holder, press on the card using a flat object to release it and then remove it.

To connect the cable to the modem, push it in the connector until a click, so the cable connector is fixed in place.

To disconnect the cable, depress the connector latch.

To connect the modem to the product, disconnect the control panel from the product harness and connect the harness to the modem as shown in Fig.2.

After connecting the modem to the power harness (modem power supply), the LED closest to the antenna connector starts to glow. The second LED will start to blink (connection and data exchange).

Important: For both pre-heater and heater, when connecting a modem with version 703 software, wait for one minute after the power supply is on before connecting the control panel. This is not required for version 704.

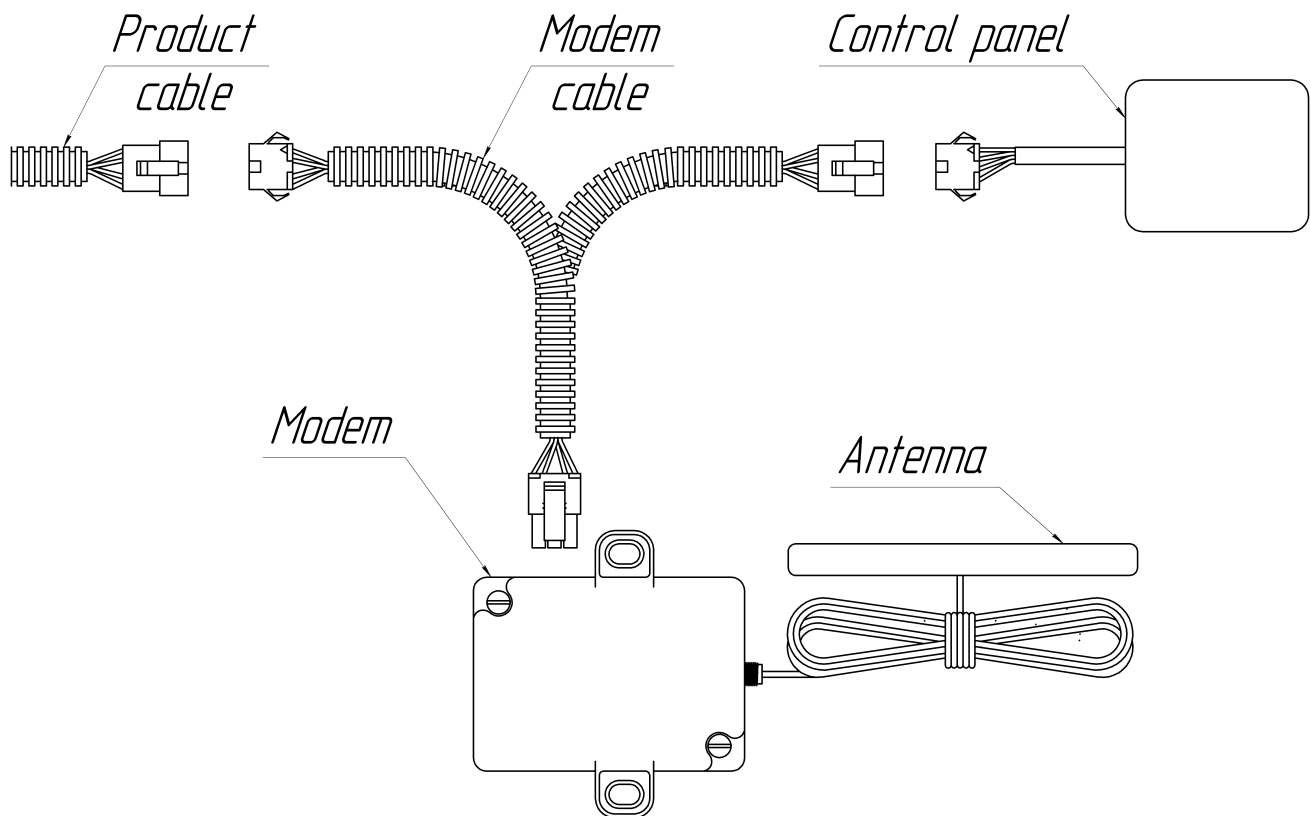


Fig. 2. Modem connection to
BINAR-5-Compact, BINAR-5S, and PLANAR

4.2 Preparation of SIM Card

To control the pre-heater by means of SMS-commands, phone numbers of SIM cards from which you plan to maintain control should be added to the contacts of the modem SIM card.

Insert the SIM card in the modem and turn on the power supply. When the connection is established (the LED indicating connection to the network is blinking slowly), you can add trusted numbers.

Attention! The first phone number to add is that of the Administrator. All further actions with trusted numbers are made only from this number.

Attention! Commands must be written in lowercase.

Adding the Administrator phone number:

SMS text: `adminxxxxxxxxxxxx`

where `xxxxxxxxxxxx` – the administrator phone number. This SMS-command should be sent from the administrator's phone.

Example: `admin+71234567891`

If the administrator's phone number has been entered successfully, the following message is returned:

Admin: `xxxxxxxxxxxx`

Adding a trusted phone number:

Trusted numbers can only be added from the administrator's phone number.

SMS text: `addxxxxxxxxxxxx`

`xxxxxxxxxxxx` – trusted phone number.

Example: `add+71234567892`

The return message is as follows:

1. `+71234567891`
2. `+71234567892`

The first phone number on the list is the administrator's number. The rest (from 2 to 5) are trusted user numbers.

Viewing all trusted phone numbers

This command is only available from the administrator's phone number.

SMS text: `list`

The return message is as follows:

1. `+71234567891`
2. `+71234567892`

Removing a trusted number:

SMS text: delx

x = 2..5 – the sequential number of a trusted number in the list.

Example: del2

The return message is as follows:

1. +71234567891

Removing the administrator number (del1) with this command is not possible.

Removing all the numbers (including the Administrator's number)

SMS text: delall

The return message is as follows:

All the trusted numbers have been deleted.

After running this command, the administrator's number needs to be entered again.

There is also a possibility of entering trusted numbers by telephone. For that you can insert the SIM card of the modem in the phone and enter trusted numbers under the names of +1, +2, +3, +4, +5. Remember, the number 'one' should be the administrator's number, and all further actions with trusted numbers using SMS-commands will only be made from this number.

Telephone numbers are written in the following form:

(country code) (area code or access to mobile operator) (phone number).

Example of a number for Russia: +71231234567

Example of working with trusted numbers using SMS-commands:

Direction	SMS text	Description
To modem	admin+71234567891	Adding administrator number
Modem response	Admin:+71234567891	
To modem	add+71234567892	Adding trusted number
Modem response	1. +71234567891 2. +71234567892	
To modem	add+71234567893	Adding trusted number
Modem response	1. +71234567891 2. +71234567892 3. +71234567893	
To modem	add+71234567894	Adding trusted number
Modem response	1. +71234567891 2. +71234567892 3. +71234567893 4. +71234567894	
To modem	list	Viewing the list of trusted numbers
Modem response	1. +71234567891 2. +71234567892 3. +71234567893 4. +71234567894	
To modem	del2	Removing trusted number No. 2
Modem response	1. +71234567891 3. +71234567893 4. +71234567894	

5. Controlling the Product.

Product can be controlled in three ways:

- 1) by means of a telephone call;
- 2) by means of a mobile application;
- 3) by means of SMS messages (dialed manually).

6. Controlling the Product by Means of a Telephone Call


The product can be controlled only from a trusted phone number. When you call the modem number:

- If the product is stopped, the modem will respond with three beeps and will start the product.
- If the product is running, the modem will respond with two beeps and will stop the product.

7. Controlling the Product by Means of a Mobile Application

The product can be controlled by means of an application installed on a mobile phone with Android or iOS operating system. To do this, you need to download the app Autoterm Control from Play Market or from AppStore and install it on your phone.

After installation, click the Autoterm Control application to start it.

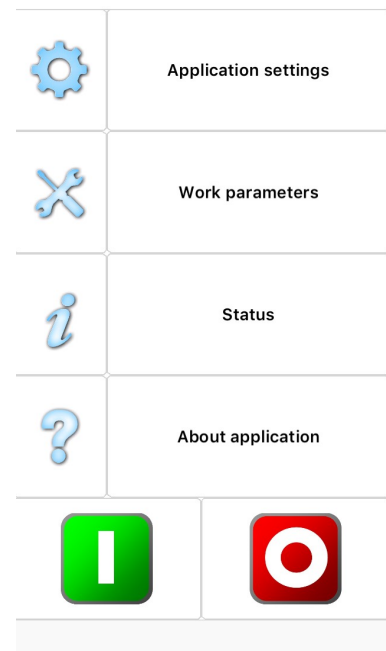

Autoterm Control settings:

- adding the product¹;
- ON/OFF SMS notifications;
- ON/OFF SMS malfunction notifications;
- confirm sending SMS;
- call notification²;
- language selection;
- about the product³.



Operation settings:

- set operation time of the pre-heater⁴;



- ON/OFF cabin heater;
- set cabin heater ON temperature;
- ON/OFF pump start-up at engine start;
- set temperature of pre-heater transition to standby mode;
- ON/OFF product control from the alarm system remote;
- ON/OFF auxiliary heater mode.



Requesting the current status of the product.



Account balance request on the modem card number.



Product start-up (if SMS notification is enabled, an SMS-message is returned confirming the start-up of the product).




Product shutdown (if SMS notification is enabled, an SMS-message is returned confirming the shutdown of the product).

- 1 – Enter the number in the following format:
(country code) (city/wireless carrier code) (phone number)

Example number: +71231234567

When adding a PLANAR heater and a 14TC pre-heater, select SIMCOM in the Modem section.

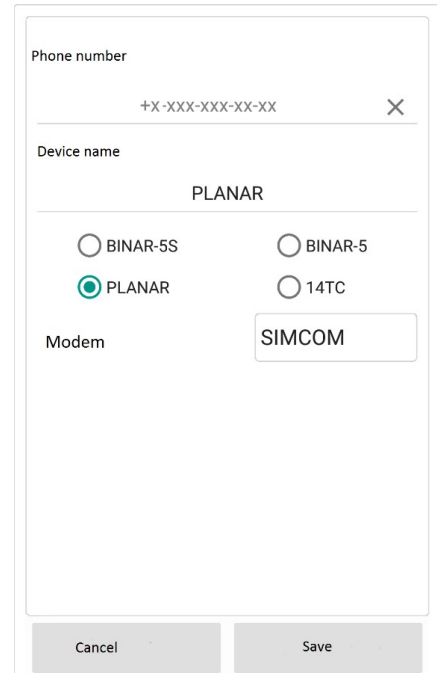

Phone number
+X-XXX-XXX-XX-XX X

Device name
PLANAR

☐ BINAR-5S ☐ BINAR-5
☒ PLANAR ☐ 14TC

Modem
SIMCOM

Cancel Save

- 2 – When a voice call to the modem number is made, an SMS status notification is returned.
- 3 – Information on the serial number of the pre-heater, the software version of the electronic unit and modem software version are returned.
- 4 – Operation time can be set even when the product is running.

8. Controlling the Product by Means of SMS-Commands Sent from Mobile Phone

If your phone does not support installation of the Autoterm Control application, the product can be controlled by means of SMS-commands typed in manually. SMS-commands should be sent to the number of the SIM card installed in the modem.

A command consists of the start character (*), command number, command separator character and parameters (point), one or more parameters, separated by commas, and the character of the end of command (#).

Command number and parameters may consist only of numbers and English letters. Characters are case sensitive. That is the parameters P and p are different parameters. Using other characters is not allowed and commands with such characters are ignored.

Absence of one or more command parameters is allowed.

Example command for pre-heater: *1.P1E1T60#

Example command for heater: *1.P1E1T60W4p9S23I1#

8.1 Description of Commands for Product BINAR-5S:

Start-up

SMS text for pre-heater: *1.PP₁EP₂TP₃#

SMS text for heater: *1.PP₁EP₂TP₃WP₄pP₅SP₆IP₇#

Description of parameters:

P – Pre-heater (heater) sending confirmation of successful receipt of the command.

1 – send confirmation,

0 – do not send confirmation.

Default 1.

E – Pre-heater (heater) sending error message in case of a failure in operation.

1 – send error message,

0 – do not send error message.

Default 1.

T – Operation time in minutes. For pre-heater, the time can be set in a range of 20 to 120 minutes. For heater, the time can range from 20 minutes to an indefinite period. For unlimited-time operation, set the value 65535.

The default period is 40 minutes.

W – Heater operation mode:

- 1 – to temperature of electronic-heater unit board
- 2 – to panel temperature
- 3 – to temperature of exterior (cab) sensor
- 4 – to power set from control panel

The default option is 4.

p – Set heater power, which ranges from 0 (minimum) to 9 (maximum).

S – Temperature setting (in degrees Celsius) to which the heater will attempt to heat the environment according to the temperature set for W. The temperature can range from 1 °C to 30 °C. The default value is 15.

I – Enable/disable heater ventilation mode

- 1 – Enable
- 2 – Disable

The default option is 2.

Example command for pre-heater start-up:

***1.P1E1T60#** – Start-up with receipt confirmation, failure notification, and 60 minute operation

Example of SMS confirmation of receipt of the start-up command:

Start confirmation

Mode: Ignition

U= 12,5V

T= 23C

Work Time 01:15

Example SMS message for a failure:

Information

Mode: Blowing

U= 12,5V

T= 23C

Work Time 00:49

Failure: 17

Example command **for heater** start-up:

***1.P1E1T60W4p9S23I1#** — Start-up with receipt confirmation, failure notification, and 60 minute operation

Example SMS message confirming receipt of the start-up command:

Start confirmation

Mode: Ignition

U= 12.5V

Tset= 23C

```
>Tplnr 25C
Text --C
Tpnl -C
Vent OFF
Work Time 01:15
```

Example SMS message for a failure:

```
Information
Mode: Blowing
U= 12.5V
Tset= 23C
>Tplnr 24C
Text --C
Tpnl -C
Vent ON
Work Time 00:49
Failure: 17
```

Operating parameters

Use this command to change the **pre-heater** parameters during operation:

SMS text: *2.PP₁EP₂TP₃#

Use this command to change the **heater** parameters during operation:

SMS text: *2.PP₁EP₂TP₃WP₄pP₅SP₆IP₇#

Description of parameters:

P – Pre-heater (heater) sending confirmation of successful receipt of the command.

1 – send confirmation,

0 – do not send confirmation.

Default 1.

E – Pre-heater (heater) sending error message in case of a failure in operation.

1 – send error message,

0 – do not send error message.

Default 1.

T – Operation time in minutes. For **pre-heater**, the time can range from 20 to 120 minutes. For **heater**, the time can range from 20 minutes to an indefinite period. For unlimited-time operation, set the value 65535.

The default time is 40 minutes.

W – Heater operation mode:

1 – to temperature of electronic-heater unit board

- 2 – to panel temperature
- 3 – to temperature of exterior (cab) sensor
- 4 – to power set from control panel

The default option is 4.

- p** – Set heater power, which ranges from 0 (minimum) to 9 (maximum).
The default value is 5.

- S** – Temperature setting (in degrees Celsius) to which the heater will attempt to heat the environment according to the temperature set for **W** - The temperature can range from 1 °C to 30 °C.
The default value is 15.

- I** – Enable/disable heater ventilation mode
- 1 – Enable
 - 2 – Disable
- The default option is 2.

Example command for **pre-heater**:

***2.P0E1T60#** – Change of parameters without confirmation of receipt, with a notification of failure, operating time of 60 minutes:

Example of return SMS:

Parameters.

Mode: Blowing

U= 12,5V

T= 23C

Work Time 00:49

Example command **for heater**:

***2.P1E1T34W5p9S23I1#** – parameter alternation with receipt acknowledgement, failure notification, and 34 minute operation:

Example response text:

Parameters.

Mode: Ignition

U= 12.5V

>Power: 5

Tplnr 25C

Text --C

Tpnl -C Work Time 00:03

Shutdown

SMS text: *3.P₁#

Description of parameters:

P – pre-heater (heater) sending confirmation of successful receipt of the command.

1 – send confirmation,

0 – do not send confirmation.

Default 1.

Example SMS confirmation for **pre-heater**:

Stop confirmation.

Mode: Blowing

U= 12,5V

T= 23C

Work Time 00:49

Failure: 17

Example SMS confirmation for **heater**:

Stop confirmation.

Mode: Blowing

U= 12.5V

>Power: 5

Tplnr 25C

Text --C

Tpnl -C

Work Time 00:3

Failure: 17

Information request

SMS text: *4#

Upon receipt of this command response is sent in any case.

Example SMS response from **pre-heater**:

Information

Mode: Ignition

U= 11,2V

T= 02C

Work Time 00:02

Example SMS response from **heater**:

Information

Mode: Ignition

U= 12.5V

>Power: 9

Tplnr 25C

Text --C

Tpnl -C

Work Time 00:03

Setting start-up time

SMS text for pre-heater: *5 . **P**₁**E**₂**T**₃**M**₄#

SMS text for heater: *5 . **P**₁**E**₂**T**₃**M**₄**W**₅**p**₆**S**₇**I**₈#

Description of parameters:

P – Pre-heater (heater) sending confirmation of successful receipt of the command.

1 – send confirmation,

0 – do not send confirmation.

Default 1.

E – Pre-heater (heater) sending error message in case of a failure in operation.

1 – send error message,

0 – do not send error message.

Default 1.

T – Operation time in minutes. For **pre-heater**, the time can range from 20 to 120 minutes. For **heater**, the time can range from 20 minutes to an indefinite period. For unlimited-time operation, set the value 65535.

The default time is 40 minutes.

M – Time in minutes after which the **pre-heater (heater)** will start up.

The default time is 40 minutes.

W – Heater operation mode:

1 – to temperature of electronic-heater unit board

2 – to panel temperature

3 – to temperature of exterior (cab) sensor

4 – to power set from control panel

The default option is 4.

p – Set heater power, which ranges from 0 (minimum) to 9 (maximum).

The default value is 5.

S – Temperature setting (in degrees Celsius) to which the heater will attempt to heat the environment according to the temperature set for W. The temperature can range from 1 °C to 30 °C.
 The default value is 15.

I – Enable/disable heater ventilation mode
 1 – Enable
 2 – Disable
 The default option is 2.

Examples of start-up commands: Text of SMS confirmation:
 *5.**P1E1T60M78**# Deferred start confirmation.

Cancelling deferred start-up

SMS text: *5#
 Text of return SMS:
 Deferred start has been canceled.

Information request on deferred start-up

SMS text: *6#
 Example text of return SMS:
 Start in 1 days 15 hours 26 minutes.

Setting up preheater operating parameters

SMS text: *7.**P**P₁**t**P₂**W**P₃**R**P₄**J**P₅**M**P₆**N**P₇**F**P₈**r**P₉**s**P₁₀#

Description of parameters:

P – preheater sending confirmation of successful receipt of the command.
 1 – send confirmation,
 0 – do not send confirmation.
 Default 1.

t – transition temperature to standby mode when operating as a preheater
 [20..95]°C. Default 88°C.

W – auxiliary heater mode.
 0 – auxiliary heater mode turned off,
 2 – automatic mode of auxiliary heater turned on,
 3 – manual mode of auxiliary heater turned on.

R – relay ON temperature [30..60]°C. Default 40°C.

- J** – pump control signal with PWM / without PWM
 1 – with PWM,
 0 – without PWM.
- M** – pump operating conditions.
 0 – in normal mode
 1 – in normal mode + always turns on when the vehicle engine is running.
- N** – transition temperature to standby mode when operating as auxiliary heater [80..95]°C.
- F** – relay control of the cabin heater.
 0 – operating in automatic mode.
 1 – turned off.
- r** – pump operation with auxiliary heater in standby mode:
 0 – in normal mode,
 1 – turned off.
- s** – alarm channel control:
 0 – in normal mode,
 1 – turned off.

Examples of return SMS messages.

Example 1:

Settings: Tw=46C W=A Tr=49C P=No PWM PC=P Sp=OFF Th=95C R=OFF S=ON		– transition temperature to standby mode (heater) 46°C. – automatic mode of auxiliary heater turned on. – cabin heater relay ON temperature 49°C. – pump control signal without PWM. – pump operation only when the heater is running. – pump OFF with auxiliary heater in standby mode – transition temperature to standby mode (auxiliary heater) 95°C. – relay control signal of the cabin heater OFF. – alarm channel ON.
---	--	---

Example 2:

Settings: Tw=88C W=M Tr=40C P=PWM PC=P+M Sp=ON Th=95C R=ON S=OFF		– transition temperature to standby mode (heater) 88°C. – manual mode of auxiliary heater turned on. – cabin heater relay ON temperature 40°C. – pump control signal with PWM. – pump operation when the heater and engine are running. – pump ON with auxiliary heater in standby mode. – transition temperature to standby mode (auxiliary heater) 95°C. – relay control signal of the cabin heater ON. – alarm channel OFF.
---	--	--

Requesting operating parameters of the heater

SMS text: *7#

Upon receipt of this command response is sent in any case.

Text of return SMS:

Settings: Tw=46C W=OFF Tr=49C P=No PWM PC=P Sp=ON Th=80C R=OFF S=ON		<ul style="list-style-type: none"> – transition temperature to standby mode (heater) 46°C. – auxiliary heater mode turned off. – cabin heater relay ON temperature 49°C. – pump control signal without PWM. – pump operation only when the heater is running. – pump ON with auxiliary heater in standby mode. – transition temperature to standby mode (auxiliary heater) 80°C. – relay control signal of the cabin heater OFF. – alarm channel ON.
--	--	---

Attention! Due to the limited number of characters, in SMS messages in Russian, parameters that are turned off are not displayed. Such parameters are indicated in the table by the "---" symbol.

Resetting the parameters of the heater (factory settings)

SMS text: *8#

Upon receipt of this command response is sent in any case.

Text of return SMS:

Settings: Tw=88C W=OFF Tr=40C P=No PWM PC=P Sp=ON Th=95C R=ON S=ON		<ul style="list-style-type: none"> – transition temperature to standby mode (heater) 88°C. – auxiliary heater mode turned off. – cabin heater relay ON temperature 40°C. – pump control signal without PWM. – pump operation only when the heater is running. – pump ON with auxiliary heater in standby mode. – transition temperature to standby mode (auxiliary heater) 95°C. – relay control signal of the cabin heater ON. – alarm channel ON.
---	--	--

Requesting heater serial number and software version

SMS text: *9#

In response to this command, an SMS message with the heater serial number and the version of the software of the electronic unit and software version of the modem is sent.

Example of return SMS:

Serial:0660000000.
CU Ver:6.1.0.0.
Modem Ver:1.0.1.2.

Attention! Due to the limited number of characters, in SMS messages in Russian, parameters that are turned off are not displayed. Such parameters are indicated in the table by the "---" symbol.

Setting notifications

SMS text: *15.**P**₁**E**₁**C**₁**L**₁#

Description of parameters:

- P** – Pre-heater (heater) sending confirmation of successful receipt of the command.
1 – send confirmation,
0 – do not send confirmation.
Default 1.
- E** – Pre-heater (heater) sending error message in case of a failure in operation.
1 – send error message,
0 – do not send error message.
Default 1.
- C** – Pre-heater (heater) sending a message about information after the incoming call is completed
1 – send message,
0 – do not send message.
Default 0.
- L** – language selection for SMS
1 – Russian,
0 – English.

Example of return SMS:

Answer the incoming call ON. Language is English.

Requesting the balance

SMS text: *16#

Return SMS is received depending on the modem response on balance.

9. Overall Testing of Modem after Installation

After the installation and connection of the modem to the product, the modem is tested in the following manner:

- Check that the red LED is lit (closest to the antenna connector);
- Request the status of the product.

If an SMS response is returned after the request, the modem is installed correctly.

If the LED is not lit, check the wires and connectors of the modem harness.

The second LED flashes - modem with a SIM card communicates with the operator.

10. Transportation and Storage

Packed modem can be transported by any means of transport, provided the protection of products and packaging from precipitation is in accordance with storage and from the effects of mechanical impact per conditions of transportation.

Transportation and storage conditions of the modem with regard to climatic factors must comply with the provisions of 2 (C) GOST 15150-69.

11. Certificate of Sale

Product	<u>Modem SIMCOM</u>
Manufacturer	<u>ADVERS OOO</u>
Date of sale	_____
Purchaser	_____
Seller	_____

Stamp

12. Warranty

12.1 The warranty period is 24 months from the date of sale of the product, on condition that the user complies with handling, transportation and storage requirements and as provided by the operation manual.

12.2 In the absence of the stamp of the seller organization with the date of sale the warranty period is calculated from the date of manufacture of the modem.

12.3 When a fault occurs during the warranty period due to the fault of the manufacturer, the modem is replaced by the manufacturer.

12.4 The manufacturer shall not accept claims on incompleteness of delivery or mechanical damage after the sale of the product.

12.5 This warranty does not cover defects resulting from:

- Force majeure (lightning, fire, flood, flooding, harmful voltage fluctuations, accident);
- Non-compliance with the rules of installation, operation, storage and transportation set forth in the operating instructions;
- Use of modem for other purposes.

12.6 In case the operation manual for the modem is lost, the user is deprived of the right to warranty service.

